



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa
Ph. +39 010 565268 – Fax. +39 010 542831
info@cappato.net - www.cappato.net

DATA – Date: 11 May 2007	DOCUMENT N° - Doc. N° OI-01
Pag-Sh 1 di-of 13	Rev.
Updated in : 09/05/2007	0

MIB 303

Automatic Separation System Module

Operating Instructions



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net



Study instruction manuals and observe the warnings before installation, operation, service and maintenance.

Not following the instructions can result in serious accidents with fatal injuries.

In order to make the information clear only foreseeable conditions have been considered. No warnings are given, therefore, for situations arising from unintended usage of the machine and its tools.

A summary of the safety information is found in the Safety chapter under divider 1.

Kto Supply Sas: a XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net

Contents

- 1 Scope**
- 2 Operating**
 - 2.1 Check List before Start up**
 - 2.2 Start up**
 - 2.2.1 Local Start-up**
 - 2.2.2 Automatic Start-up**
 - 2.2.3 Remote Start-up**
 - 2.2.4 Stand-by operation**
 - 2.3 Checks During Operation**
 - 2.4 Stop**
 - 2.5 Sludge Removal**
 - 2.6 Emergency Stop**
 - 2.7 After Emergency Stop**

Kto Supply Sas: a XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net

1. Scope

These operating instructions are valid for the MIB 303 Automatic separation system.

The MIB separation system is designed for cleaning of gas oil, marine diesel oil, and lube oil.



2. Operating

2.1 Check List before Start up




WARNING

The separator is fitted with a safety yoke and a magnetic safety switch. Modifications to the machine which put the safety device out of operation can lead to serious injury or damage.

Before start up:

Separator

1. Ensure that the separator is reassembled and reconnected correctly.
2. Make sure that the correct level ring is installed.
 - For cleaning **gas oil** only, install the **white level ring** which has a 43 mm diameter hole.
 - For cleaning marine diesel oil and lube oil, install the black level ring which has a 50 mm diameter hole.
 - For alternating between marine diesel oil and gas oil, install the black level ring with hole diameter 50 mm.

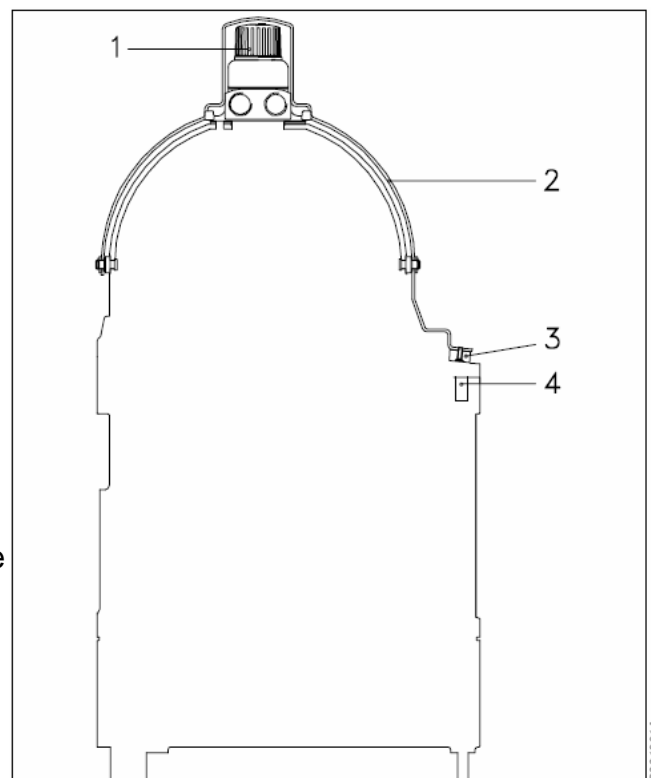

1. Paring disc knob
2. Safety yoke
3. Magnet
4. Magnetic safety switch



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa
Ph. +39 010 565268 – Fax. +39 010 542831
info@cappato.net - www.cappato.net

2. Operating instructions


MIB-303 Operating instructions

3. Make sure that the hood screws and the paring disc knob are firmly tightened that the safety yoke is in its closed (vertical) position.
4. Make sure that the valves on the suction and delivery sides are open.
5. After installation and after each dismantling and assembly operation, the pump must be filled with oil before starting. Since the pump is of self-priming type, a change of sound can be heard when the suction line has been primed.

2.2 Start up



Starter

1. Turn the red main switch on the separator starter/control unit to the '1' position.

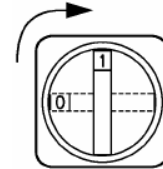

2.2.1 Local start-up (Manual mode)

1. Check that the control switch is on 'LOC' position.
2. Turn the separator switch clockwise from the '0' position to the 'start' position. When the switch is released, it will spring back to the '1' position. The separator starts and the lamp lights.

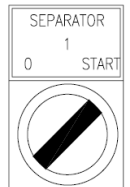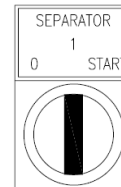

It will take 20 seconds for the separator to reach full speed.





3. Establish the water seal by pushing the button "WATER SEAL VALVE CONTROL" on the starter in order to allow water to flow into the separator. The water seal is now established.



NOTE: The time that button must keep pushed Depends from the water pressure. Check it directly at the moment of start-up

4. Turn the pump switch clockwise from the '0' position to the start position and hold it for approx. 15 seconds until the counter pressure in the oil outlet line has reached approx. 50 kPa (0.5 bar) and the alarm lamp is off. Then release the switch. It will spring back to the '1' position. The pump starts and the lamp lights. The feed pump cannot be started until the separator is running.

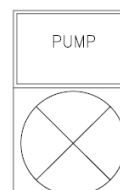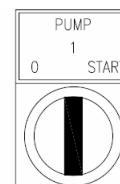

2. Operating instructions



MIB-303 Operating instructions

- Set the counter pressure in the oil outlet line to 50-100 kPa (0.5-1.0 bar). After 60 seconds, check that oil is not leaving the separator through the water outlet down to the connecting tank. If oil is escaping in this way, follow the instructions given in the “Trouble Shooting” chapter in the separator manual.



For the correct separation temperature see “Technical Data” in the “System Reference”.

2.2.2 Local start-up (Automatic mode)

- Turn the control switch clockwise from the ‘LOC’ position to the ‘LOC AUTO’ position.

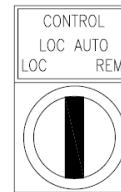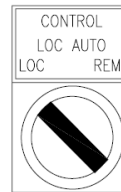

- Turn the control switch clockwise from the ‘0’ position to the ‘START’ position.

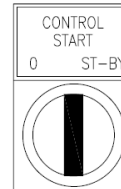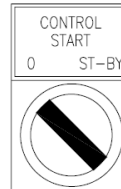

In this way the PLC (Programmable Logic controller) will start automatically in order:

- Separator
- Water seal valve (valve will be stopped after a pre-setted “operation time”)
- Feed pump

Following the internal program installed (see the “Diagram of PLC program)

Note: Water seal valve “operation time” is setted into PLC program in 5 seconds.
 This time must be checked at the first start-up in order to find the correct one.



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net

2. Operating instructions



MIB-303 Operating instructions

2.2.3 Remote start-up (Automatic mode)

1. Turn the control switch clockwise from the 'LOC' position to the 'REM' position.



2. Turn the REMOTE control switch clockwise from the '0' position to the 'START' position.

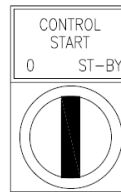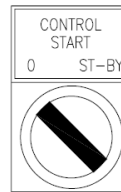

In this way the PLC (Programmable Logic controller) will start automatically in order:

- Separator
- Water seal valve (valve will be stopped after a pre-setted "operation time")
- Feed pump


Following the internal program installed (see the "Diagram of PLC program")

Note: Water seal valve "operation time" is setted into PLC program in 5 seconds.
This time must be checked at the first start-up in order to find the correct one.

2.2.4 Stand-by operation

1. Follow the procedure "2.2.1 Local start-up" point 1 to start the separator.

2. Turn the control switch clockwise from the '0' position to the 'ST-BY' position.

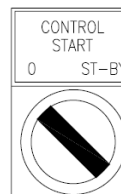

Feed pump will be now controlled by level switches MAX - MIN in this way:

- Pump will start with MIN level signal and will stop with MAX level signal

Kto Supply Sas: a XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa
Ph. +39 010 565268 – Fax. +39 010 542831
info@cappato.net - www.cappato.net

2. Operating instructions

MIB-303 Operating instructions

2.3 Checks During Operation

Check the separator for correct operation. This is especially important the first few times the separator is run after installation or after any dismantling and assembly has been carried out.

Check all connections for leakage.



Check the level in the collecting tank at regular intervals.



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa
Ph. +39 010 565268 – Fax. +39 010 542831
info@cappato.net - www.cappato.net

2. Operating instructions

MIB-303 Operating instructions

2.4 Stop

To stop the system:

- **Local operation Manual mode only**

1. Stop the feed pump by turning the pump switch to the '0' position.




2. Stop the separator by turning the separator switch to the '0' position.



- **Local operation Automatic operation only**

1. Stop the automatic operation by turning the control switch to "0" position.

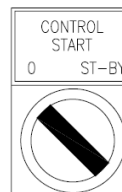

- **Remote automatic operation only**


1. Stop the automatic operation by turning the REMOTE control switch to "0" position.

Valid For all the operations

Note: The separator stops within two minutes

Approximately 1 litre oil and water will drain off into the collecting tank as the bowl stops.

1. Turn the main switch to the '0' position.
2. Make sure that the valves on both the feed and the outlet sides of the separator are closed. Oil can otherwise leak through the separator and the collecting tank can overflow.

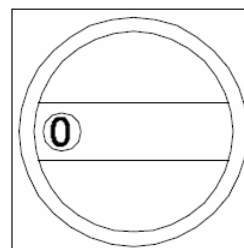



Kto Supply Sas

Via XX settembre 20/52 – IT 16121 – Genoa

Ph. +39 010 565268 – Fax. +39 010 542831

info@cappato.net - www.cappato.net

2. Operating instructions

MIB-303 Operating instructions

2.5 Sludge Removal

Separated sludge is collected inside the bowl. The bowl should be cleaned at regular intervals, depending on the quantity of solid particles in the oil.

For more details, see the cleaning instructions in the “Maintenance” and “Dismantling and assembly” chapters in the “Separator Manual”.

2. Operating instructions

MIB-303 Operating instructions

2.6 Emergency Stop

If an emergency situation occurs stop the separator and the oil feed pump immediately.

2.7 After Emergency Stop


The cause of the emergency must be remedied before attempting to restart the separator.

If the cause is not found a major service must be performed and all moving parts thoroughly checked.

To avoid accidental start, switch off and lock the power supply before dismantling.



Consult the “Separator Manual” and the “Alarm List” about emergency procedures.

Dismantling work must not be started before all rotating parts have come to a complete standstill



CAUTION
Entrapment hazard

Do not begin maintenance work while the machine is still rotating.

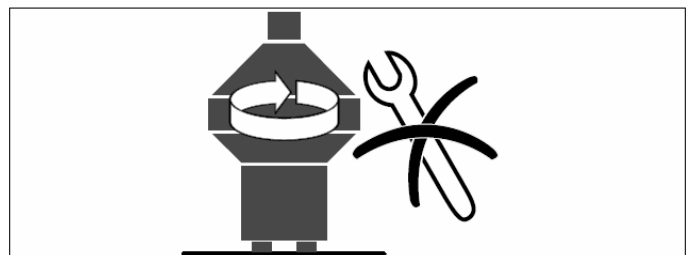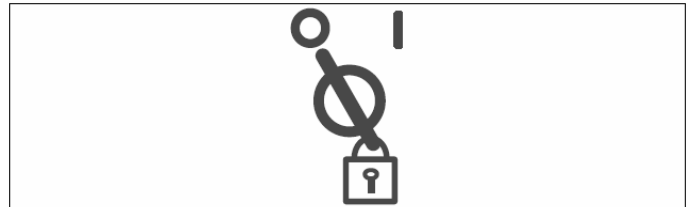

The separator must be reassembled and all covers and guards in place before unlocking the power supply and starting the system.

